



1

REMOVE SCREW ON THE CORNER OF
THE LAPTOP USING SCREWDRIVER
PROVIDED

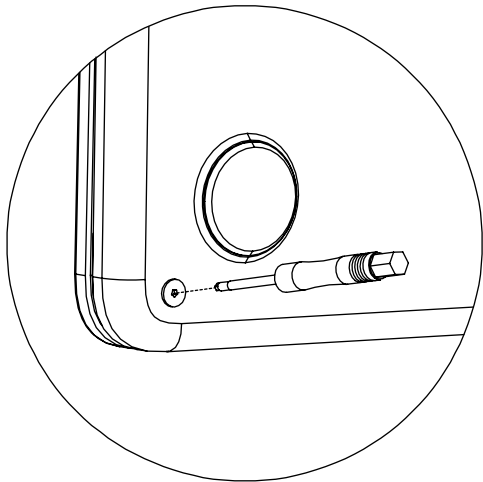


2

INSTALL LEDGE WHILE THE
LAPTOP'S LID IS OPEN WITH THE SCREW
PROVIDED

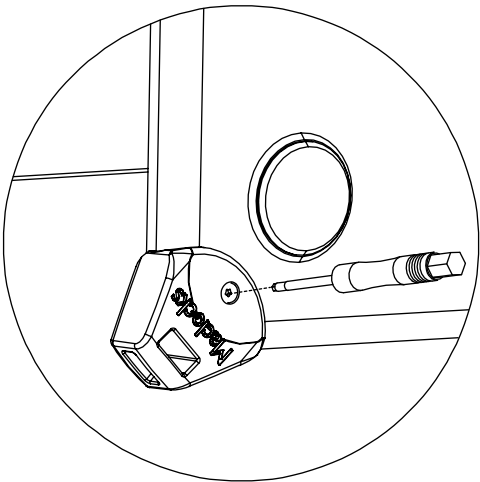


IN THE BOX



Screwdriver




Attachment Screws
(Only one screw is required)

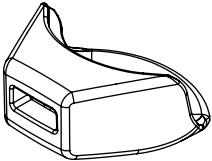

Ledge


1

REMOVE SCREW ON THE CORNER OF THE LAPTOP USING SCREWDRIVER PROVIDED

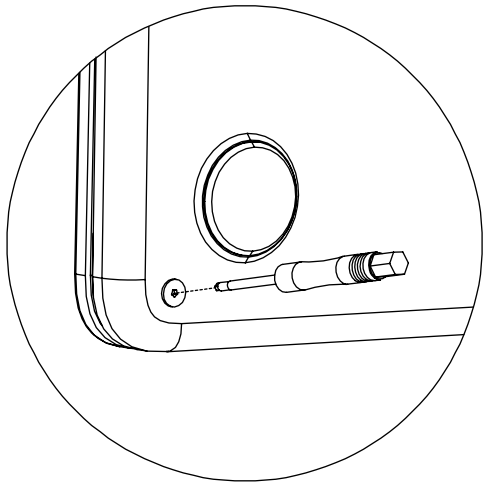


2

INSTALL LEDGE WHILE THE LAPTOP'S LID IS OPEN WITH THE SCREW PROVIDED

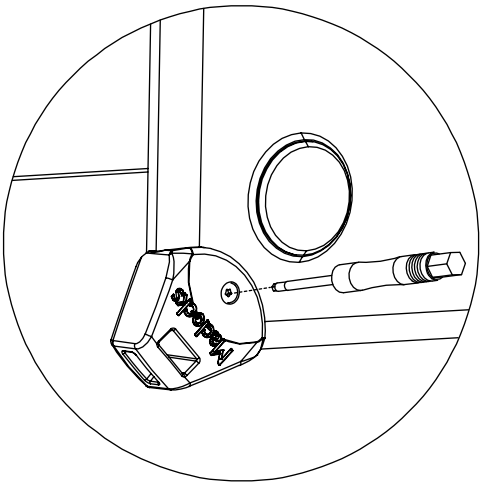


IN THE BOX



Screwdriver




Attachment Screws
(Only one screw is required)

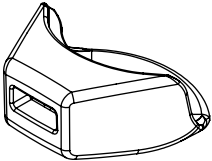


Ledge


1

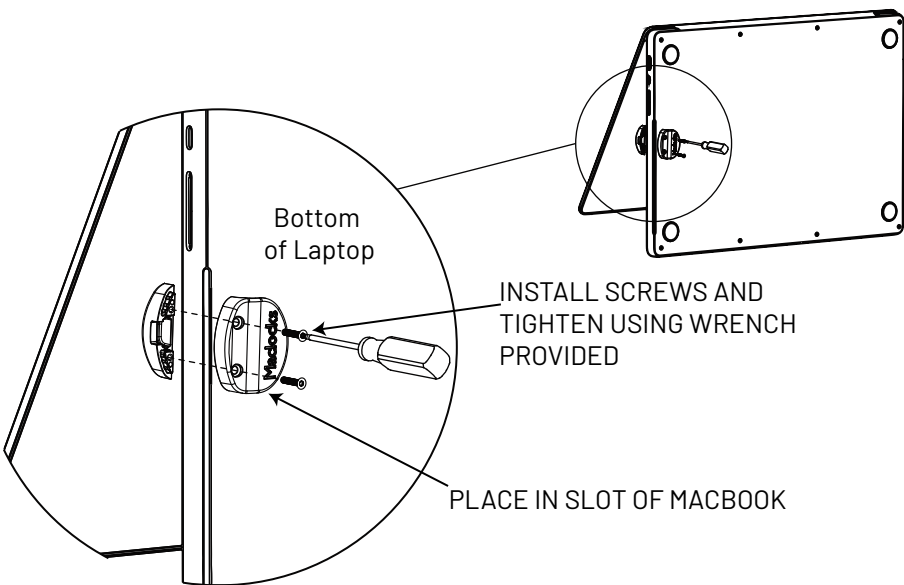

2

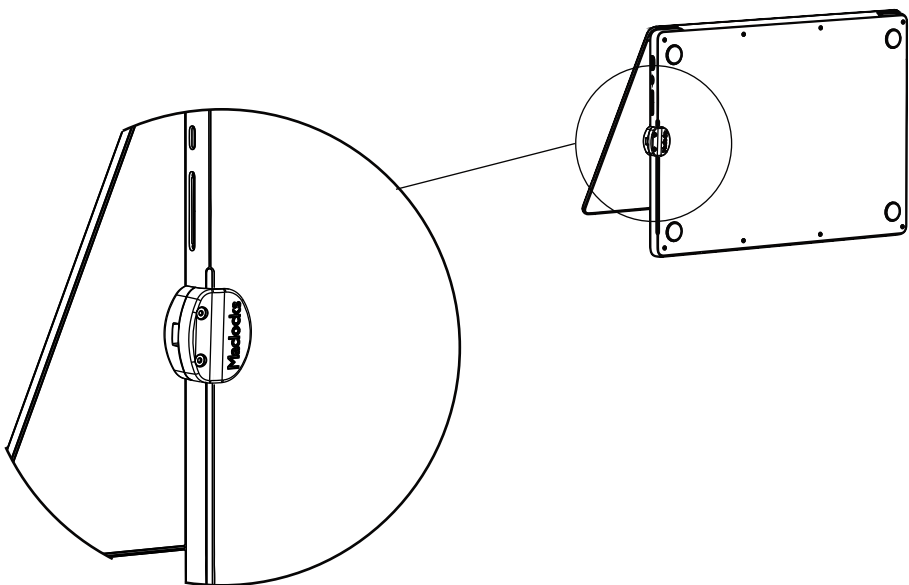


IN THE BOX



Torx driver T-7




Attachment Screws
(Only two screws are required)

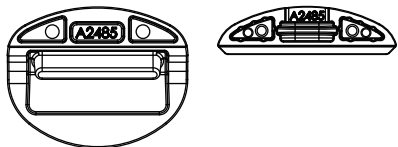


Ledge two parts


1

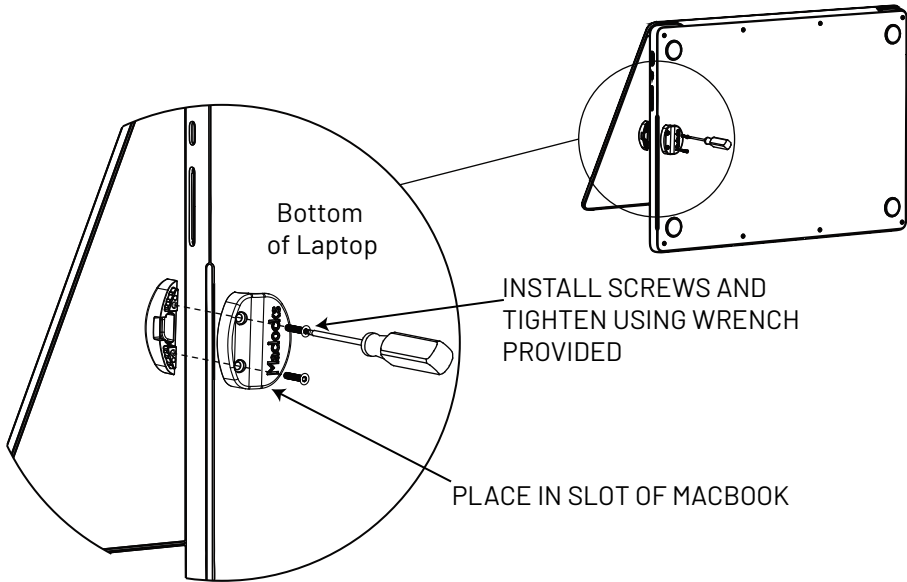

2

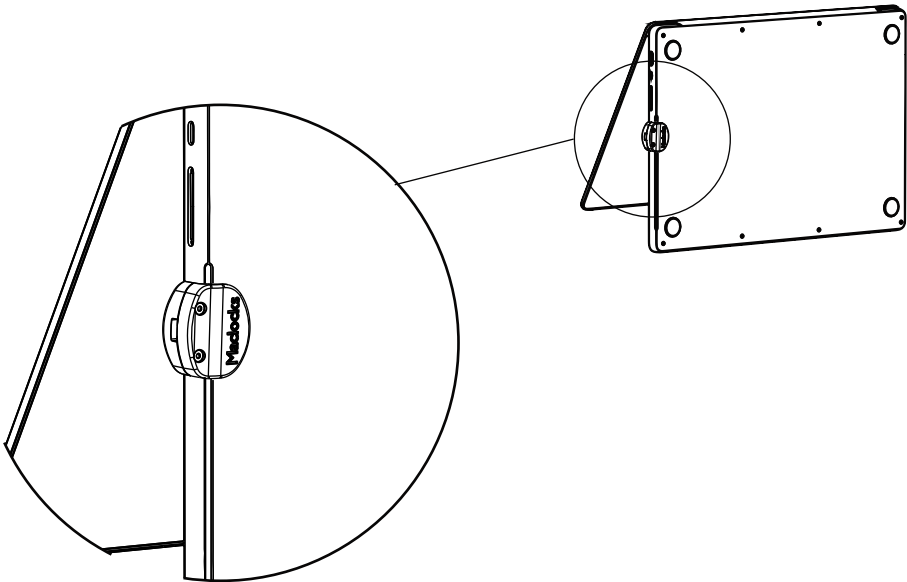


IN THE BOX



Torx driver T-7



Attachment Screws
(Only two screws are required)

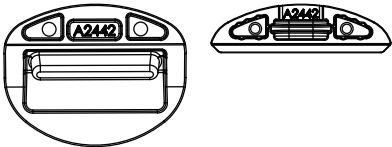

Ledge two parts